


## Step 1.

- Insert right end of Back Board into End Assembly Right Side.
- **TIP:** Assemble Field Hockey Goal on ground.

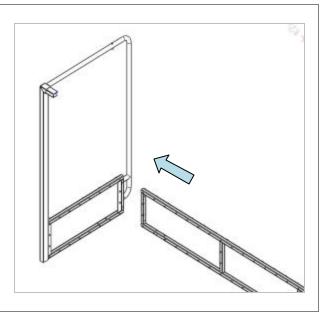


Page | 1 For assistance call 888-726-65 or visit our website at www.scoremaster.com/




#### Step 2.

- Insert Flat Washer onto 3/8X4" Hex bolt and insert Hex Bolt into the End Assembly Right End through the Back Board. Secure onto Assembly with a Flat Washer and Lock Nut.
- Tighten with Wrench.

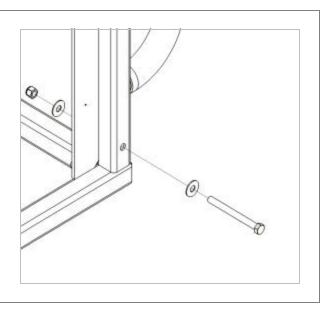

## Step 3.


- Inert Upper Cross Bar into the End Assembly Right Side. **NOTE:** Upper Cross Bar must be supported on both ends or damage may occur.
- **TIP:** Use a Step Ladder to support opposite end.
- **TIP:** Apply lubricant to inner sleeve to ease insertion.

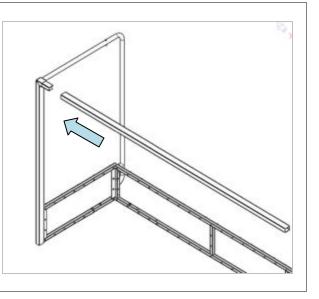




#### Step 4.

- Insert Lock Washer and then Flat Washer onto Security Fastener and insert into Upper Cross Bar.
- Use Security Allen Key to tighten Fasteners.

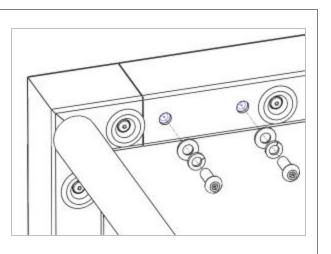

# Step 5.

- Simultaneously insert the End Assembly Right Side onto the Upper Cross Bar and Back Board.
- Repeat Step 2 and Step 4 for the right side.

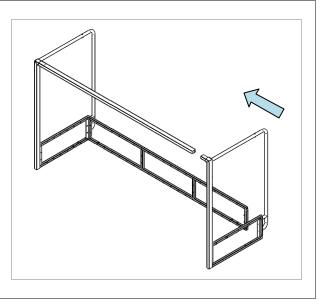



# Step 6.

- Attach Corner Bracket to both back corners between the End Assemblies and the Back Board.
- Insert Carriage Bolt through the Corner Bracket and assembly and secure with flat washer and Lock Nut.
- Tighten with Wrench.

